

Justering af sekvensventil


1. Find datablad på ventilen, og find ud af hvor mange bar du justerer pr. omgang. Se billede 1.

CODICE ORDINAZIONE ORDERING CODE	CAMPO DI TARATURA PRESSURE RANGE (bar)	TARATURA STANDARD (bar) Q= 5 l/min STANDARD SETTING (bar) Q= 5 l/min	INCREMENTO PER GIRO (bar) PRESSURE INCREASE (bar)/turn	CAMPO DI PORTATA (l/min) FLOW RANGE (l/min)	PRESSIONE MAX (bar) MAX PRESSURE (bar)
A040201.01.00	40-160	60	38	1-20	500
A040201.06.00	40-160	60	38	1-20	500
A040301.01.00	40-160	75	38	1-40	500
A040301.02.00	100-280	150	66	1-40	500
A040301.06.00	40-160	80	38	1-40	500


Billede 1.

På denne ventil Hæves/sænkes Trykket 38 Bar pr. Omgang

2. Juster Skruen højre eller venstre om for at Hæve eller sænke trykket. Se billede 2.

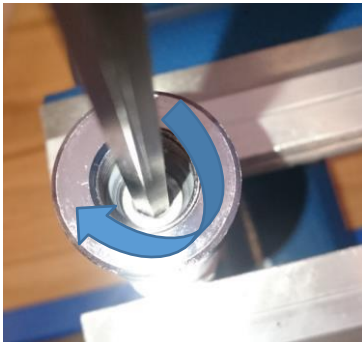

Billede 2. Hæv trykket

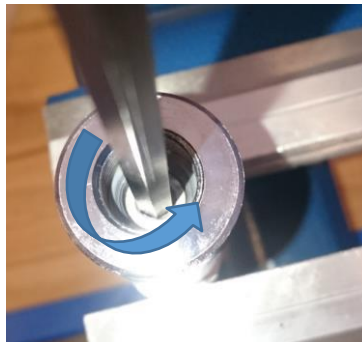

Billede 2. Sænk trykket



Billede 3.



Billede 4.